


Thanks for purchasing from MacVision. We hope this satisfies you're on the go musical needs. Below you will find instructions and screen shots on how to RIP (Raster Image Processing) and transfer files to your MP3 player. It is important to have a library of music (MP3/WMA) on your computer before you get started. Files can be stored just about anywhere on your Operating System, but these instructions are based on the notion that your files are stored under My Documents/My Music folders. If you have a disk and are using Windows 2000 or a newer version like XP, you do not need to install this disk, as your drivers have been updated. Please read below for further instruction.


How to create Windows Media Audio (WMA) files from CD to computer, using Windows Media Player.

-Open Windows Media Player and select the RIP tab or Copy from CD

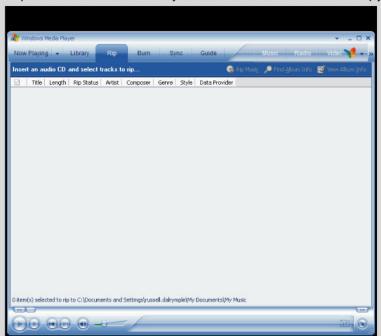

Note: In this window you will notice that it's empty, but once you put a CD in it will give you the option to RIP (copy) to My Music folder. By doing this you will create a WMA file. Please insert CD into your computer.

** If you use this feature for the first time it may ask you about settings for copying music just remember not to protect your content and choose your own settings.

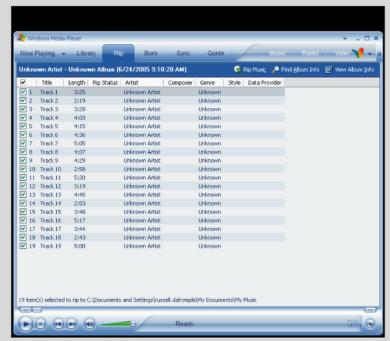

Note: In this window the CD is in the drive and if you select Rip Music or Copy Music it will start copying to /My Music folder. The RIP status or Copy Status column will show the progress.

**Please remember that your MP3 player can only read two formats WMA/MP3. In addition, if you copy your music as protected content, your MP3 player will not read these files. (Please see Options in Windows Media Player if you need to change your settings.)

-Now that you have created a WMA in My Music folder we will go over the steps on how to transfer those files and MP3's to the MacVison MP3 player.



- How to transfer WMA and MP3 files from your computer to the MacVision MP3 player, using Windows Explorer.
- -Turn on the MP3 player and insert into the USB port or use the cord provided. Your player should read "USB Music Disk". The computer may do a couple of things. We will go over the most common scenarios.

Scenario #1






Note: If your computer displays this window Removable Disk (E:), then you want to select Open folders to view files using Windows Explorer. Click on this and press OK. This will allow you to view the contents of your MP3 player. The next step will be to drag files from My Music folder, which we will open soon, into this folder (Next Window over) Note: In this window here you will see the contents of the MP3 player also known as Removable Disk, being that it's new; your player will be empty. When you actually drag files into this folder you will see your music files as they are above.

** Be sure to keep the Removable Disk Folder open so when we open My Music we can drag and drop into the Removable Disk. Go to next step.




-Next open My Documents in another window and then open My Music folder and your media files (WMA/MP3) should

be in this folder.

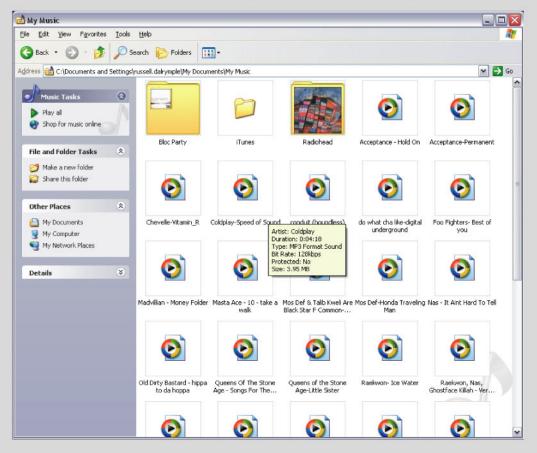

-Select a file from My Music folder, drag and drop the file into the Removable Disk window. Your file or files should show up in the window below. You are now completed with a file transfer. Be advised, they same procedure will be used if you were using another file location. Repeat the process until your player is full.

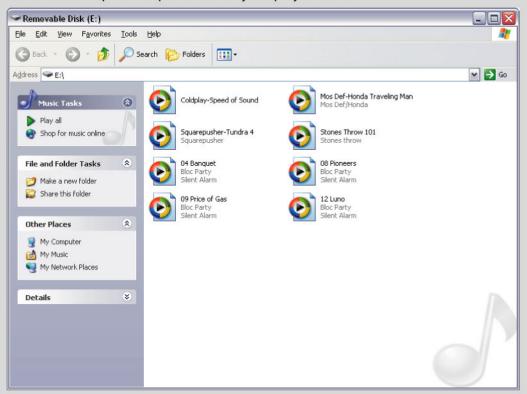




Scenario #2

In the event the Removable Disk prompt doesn't appear, please follow these instructions. You can also use this method if the other procedure doesn't work well for you.

-On your Desktop select My Computer, then right click on the icon, and select Explore. A Windows Explorer should appear as the one below. You will see My Documents on the left side of the screen and Removable Disk on the right side of the

screen.

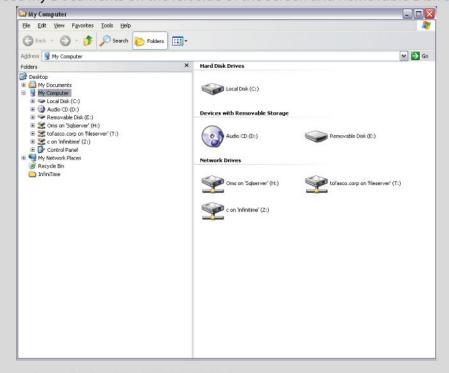

- -Next, drop down My Documents and select the My Music folder.
- -Take a file from the My Music folder, drag and drop it into the E: Removable Disk on the left of the screen. You have completed the file transfer process!

Now that you have completed the transfer you may disconnect your device and enjoy your music wherever you need to go.

